


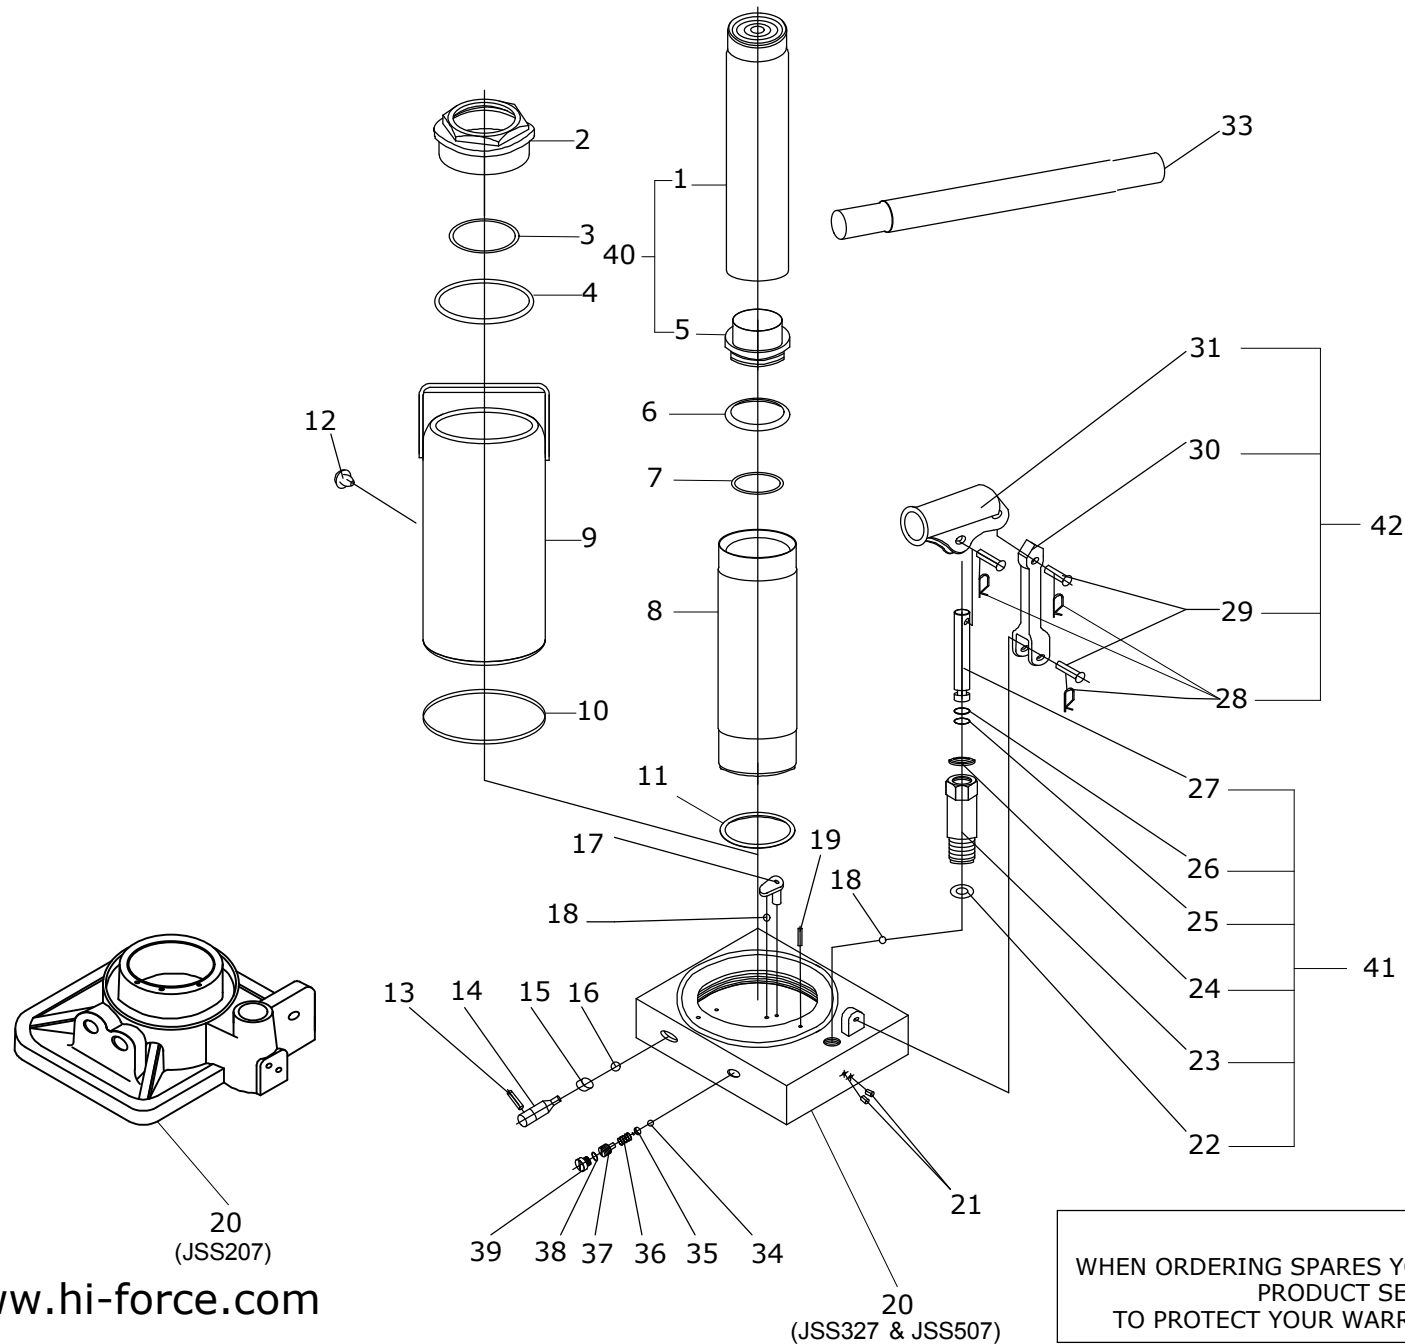

ITEM NO.	DESCRIPTION	QTY	BOTTLE JACK MODEL		
			JSS207 PART NO.	JSS327 PART NO.	JSS507 PART NO.
1	Piston Rod	1	Piston Assembly	Piston Assembly	Piston Assembly
2	Top Cap	1	JSS207-02	JSS327-02	JSS507-02
3	O-Ring	1	X	X	X
4	Circle Seal	1	X	X	X
5	Piston Head	1	Piston Assembly	Piston Assembly	Piston Assembly
6	Circle Seal	1	X	X	X
7	O-Ring	1	X	X	X
8	Oil Cylinder	1	JSS207-08	JSS327-08	JSS507-08
9	Body	1	JSS207-09	JSS327-09	JSS507-09
10	Circle Seal	1	X	X	X
11	Circle Seal	1	X	X	X
12	Oil Plug	1	X	X	X
13	Release Valve	1	X	X	X
14	Release Valve	1	X	X	X
15	Circle Seal	1	X	X	X
16	Steel Ball	1	X	X	X
17	Steel Ball Shield	1	X	X	X
18	Steel Ball	2	X	X	X
19	Dustproof Rod	1	X	X	X
20	Basement assembly	1	JSS207-20	JSS327-20	JSS507-20
21	Screw (incl. in pos. 20)	2			
22	Circle Seal	1	Pump Assembly	Pump Assembly	Pump Assembly
23	Pump	1	Pump Assembly	Pump Assembly	Pump Assembly
24	Dustproof Ring	1	Pump Assembly	Pump Assembly	Pump Assembly
25	O-Ring	1	Pump Assembly	Pump Assembly	Pump Assembly
26	Nylon Pin	1	Pump Assembly	Pump Assembly	Pump Assembly
27	Pump Core	1	Pump Assembly	Pump Assembly	Pump Assembly
28	R-Clip	3	Socket Assembly	Socket Assembly	Socket Assembly
29	Pin	3	Socket Assembly	Socket Assembly	Socket Assembly
30	Rod	1	Socket Assembly	Socket Assembly	Socket Assembly
31	Push Handle	1	Socket Assembly	Socket Assembly	Socket Assembly
33	Handle	1	JSS207-33	JSS207-33	JSS207-33
34	Steel Ball	1	X	X	X
35	Spring Basement	1	X	X	X
36	Spring	1	X	X	X
37	Relief Valve Rod	1	X	X	X
38	O Ring	1	X	X	X
39	Relief Valve Cap	1	X	X	X
40	Piston Assy	1	JSS207-40	JSS327-40	JSS507-40
41	Pump assy	1	JSS166-41	JSS327-41	JSS327-41
42	Socket Assy	1	JSS207-42	JSS327-42	JSS327-42
	Repair Kit	1	JSS207TP1-K	JSS327TP1-K	JSS507TP1-K

IMPORTANT

WHEN ORDERING SPARES YOU MUST STATE THE FULL PART NUMBER AND THE
 PRODUCT SERIAL NUMBER FROM THE LABEL.
 TO PROTECT YOUR WARRANTY ALWAYS USE GENUINE HI-FORCE PARTS